 
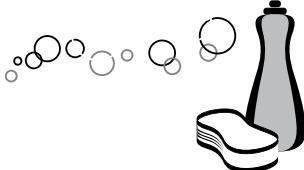 


QUICK START GUIDE

Server Squeeze Bottle Holder


Tips and tricks to help you get started with your new Squeeze Bottle Holder.

1 Remove unit from box. Clean, rinse, sanitize, and dry squeeze bottles.

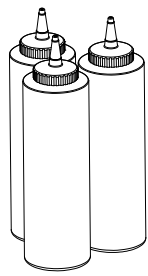




2 The squeeze bottles included are high-density which is required for heated applications.

Be aware of the product you are serving and the temperature the product is required to maintain.






3 The holder is made of stainless steel. Fully rinsing and drying all parts can help prevent corrosion.

 Do not use abrasive, caustic or ammonia based cleaners.

 
 Do not use metal scrapers or cleaning pads that could scratch surfaces.

4 Fill squeeze bottles and place into holder. Place holder in desired location such as a heated table or Server's IntelliServ® warmer.

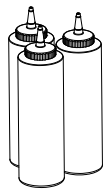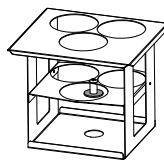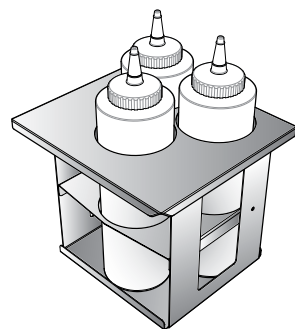WANT TO LEARN MORE?

Visit server-products.com/manual-more for your manual, part breakdown, support videos and more.
spsales@server-products.com | 800.558.8722

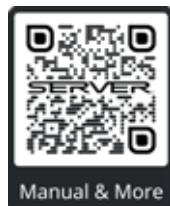

MODEL XXXX P/N #####

NSF

SERIES ##X #X

2 YEAR WARRANTY

REFERENCE YOUR PART NUMBER (P/N) LOCATED ON THE LID OR BASE.