


QUICK START GUIDE


HERSHEY'S® Classic Syrup Dispenser

Tips and tricks to help you get started with your new syrup dispenser.


1 Remove vessel and pump from box and disassemble then wash, rinse, and sanitize all parts properly before use.




2 Install O-ring into seal. Apply food equipment lubricant on O-ring.

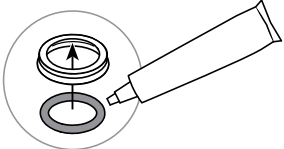


3 Install seal onto head assembly piston. Apply small amount of food equipment lubricant inside seal. Flared end of seal should face away from piston head. Install pinch valve securely to seal end. Squeeze pinch valve open before installation.

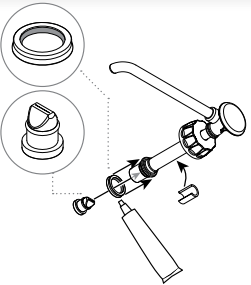


4 Install stop collar onto side of head assembly piston. Add optional gaging collars onto side of head assembly piston to reduce portion size.

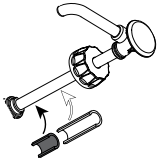


5 Insert spring into cylinder.

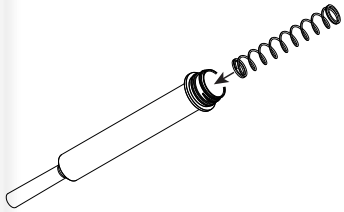


6 Snap cap onto cylinder. Press firmly to secure cap down over all threading on cylinder.

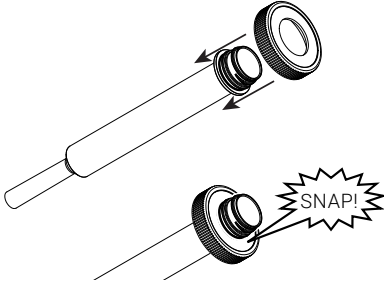


7 Install head assembly into cylinder. Apply small amount of food equipment lubricant inside top of cylinder and outside of seal. Slide locking collar down onto cylinder threading. Tighten firmly.

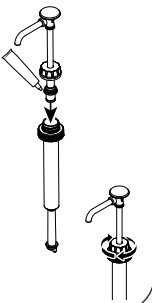


8 Prepare lid by fitting threaded insert into lid hole. Screw lower collar onto threads that descend below lid hole. Tighten cap very firmly onto top of threaded insert.

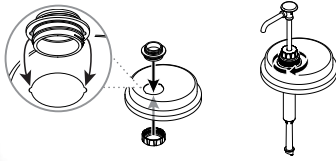


9 Attach pump to pouch by placing pouch on countertop with fitment facing up. Position pump connector directly over fitment and press down through film in fitment. Connector is fully engaged when top surface of fitment touches pump connector rim.

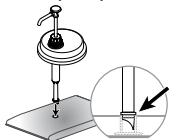

10 Insert pump, lid, and pouch combination into vessel. Prime pump by pressing several times until any air bubbles are eliminated and only product is dispensed.

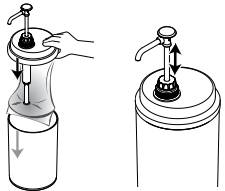


11 This pump can also be cleaned-in-place without disassembly. For complete instructions for cleaning-in-place, scan the QR code below and look up your part number in the search bar to find the manual.

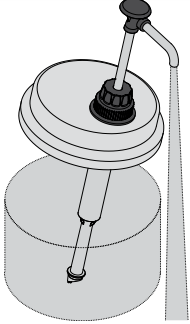

WANT TO LEARN MORE?

Visit server-products.com/manual-more for your manual, part breakdown, support videos and more.
spsales@server-products.com | 800.558.8722

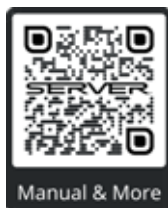

MODEL XXXX P/N #####
 SERIES ##X ##X
 NSF®

2 YEAR WARRANTY

REFERENCE YOUR PART NUMBER (P/N) LOCATED ON THE LID OR BASE.