


QUICK START GUIDE


# Stainless Steel Pump

Tips and tricks to help you get started with your new Stainless Steel Pump.


**1** Remove pump from box and disassemble then wash, rinse, and sanitize all pump parts properly before use.




**2** Install O-ring into seal. Install seal onto piston head. Apply food equipment lubricant on outside of seal. Slide washer onto piston. Slide spring onto piston.

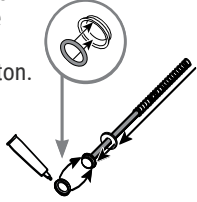


**3** Slide locking collar towards flared end of head tube. Slide head insert into head tube.

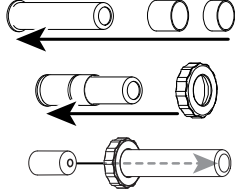


**4** Insert piston assembly into head tube assembly.

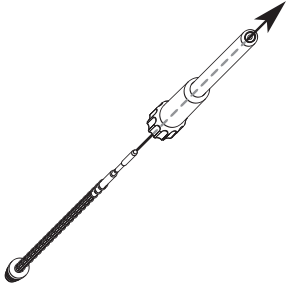


**5** Install knob. Press head tube down to compress spring and expose piston threads. Rotate knob clockwise to secure.

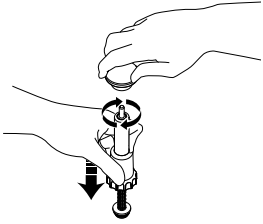


**6** Install large O-ring into valve body. Apply food equipment lubricant on O-ring.

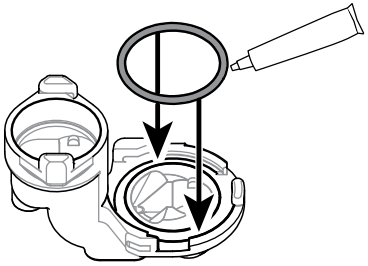


**7** Install cylinder onto valve body.

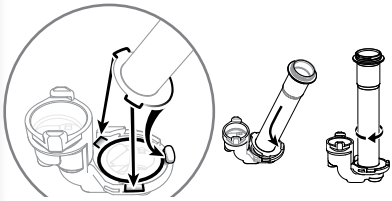


**8** Install medium O-ring onto discharge tube. Apply food equipment lubricant on O-ring. Install discharge tube onto valve body.

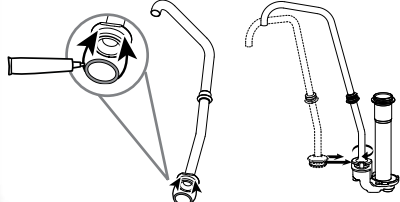

**9** Install lid by sliding small lid hole over discharge tube. Align center hole with threads on cylinder.

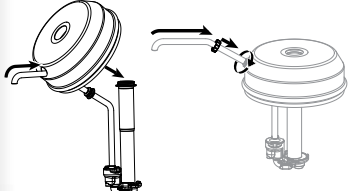


**10** Install plunger assembly into cylinder. Rotate locking collar clockwise onto cylinder threads to secure.

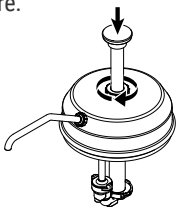

**WANT TO LEARN MORE?**

Visit [server-products.com/manual-more](http://server-products.com/manual-more) for your manual, part breakdown, support videos and more.  
[spsales@server-products.com](mailto:spsales@server-products.com) | 800.558.8722

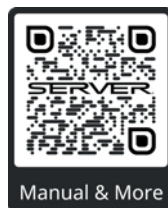

MODEL  
XXXX  
P/N  
#####

NSF®

SERIES  
##X##X

**2** YEAR  
WARRANTY

**REFERENCE YOUR PART NUMBER (P/N) LOCATED ON THE LID OR BASE.**