


QUICK START GUIDE


Server Express® Pump

Tips and tricks to help you get started with your new Server Express® pump.


1 Remove unit from box. Wash, rinse, sanitize, and air dry pump parts properly before use.




2 Squeeze pinch valve open to ensure it isn't stuck shut, then insert into pump housing.

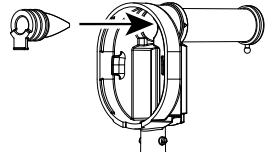

3 Press dome into housing fully and wrap loop around lower opening to secure.

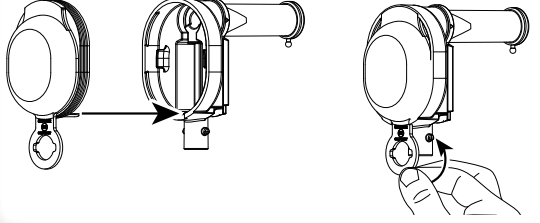


4 Install tube by rotating until both pegs on housing fit into holes on tube.

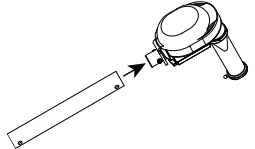

5 Install connector by rotating until both pegs on connector fit into holes on tube.


CONNECTOR MUST POINT AWAY FROM END OF DISCHARGE TUBE.

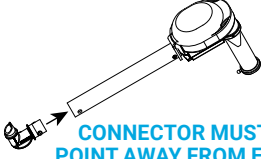


6 Select discharge fitting.

Fittings are marked small, medium or large on bottom.


CONSISTENCY OF WHAT YOU DISPENSE	SUGGESTED FITTING SIZE
THIN (hot sauce).....	SMALL
THICK (ketchup or mustard).....	MEDIUM
THICKER (relish or tartar sauce).....	LARGE

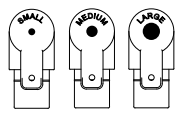

7 Insert discharge fitting into discharge tube. Place loop of fitting around peg on end of discharge tube.

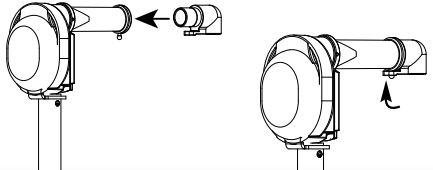


8 Full assembled pump.

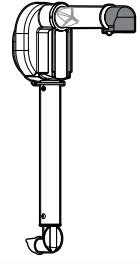

WANT TO LEARN MORE?

Visit server-products.com/manual-more for your manual, part breakdown, support videos and more.
spsales@server-products.com | 800.558.8722

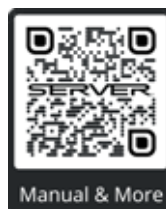

MODEL
XXXX
P/N
#####

NSF

SERIES
##X ##X

2 YEAR
WARRANTY

REFERENCE YOUR PART NUMBER (P/N) LOCATED ON THE LID OR BASE.