


QUICK START GUIDE


Stainless Steel Pump

Tips and tricks to help you get started with your new Stainless Steel Pump.


1 Remove pump from box and disassemble then wash, rinse, and sanitize all pump parts properly before use.




2 Install O-ring into seal. Install seal onto piston head. Apply food equipment lubricant on outside of seal. Slide washer onto piston. Slide spring onto piston.

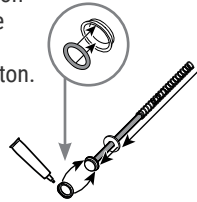


3 Add optional gaging collar onto head tube. Slide locking collar towards flared end of head tube. Slide head insert into head tube.

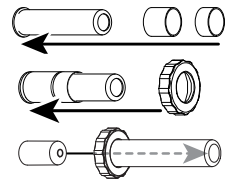


4 Insert piston assembly into head tube assembly.

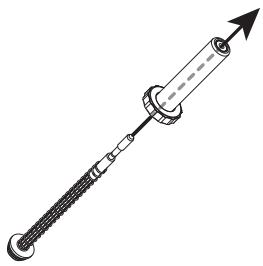


5 Install knob. Press head tube down to compress spring and expose piston threads. Rotate knob clockwise to secure.

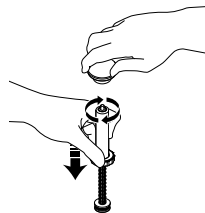


6 Install large O-ring into valve body. Apply food equipment lubricant on O-ring.

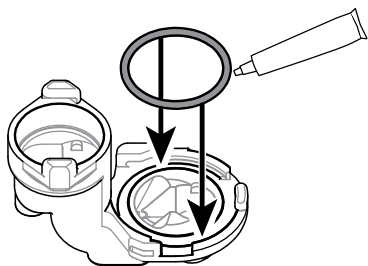


7 Install cylinder onto valve body.

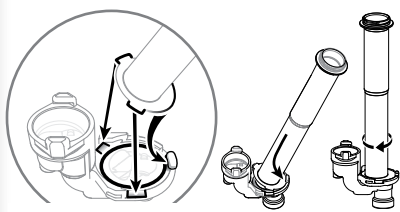


8 Install medium O-ring onto discharge tube. Apply food equipment lubricant on O-ring. Install discharge tube onto valve body.

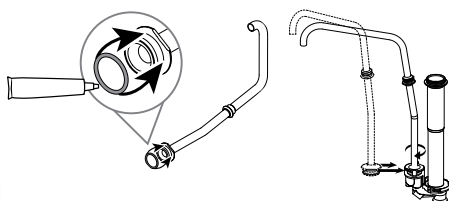


9 Insert black O-ring and suction tube into bottom of valve body.

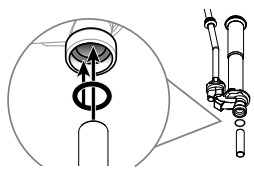

10 Install lid by sliding smaller lid hole over discharge tube. Align center hole with threads on cylinder. Secure lid with discharge tube nut.

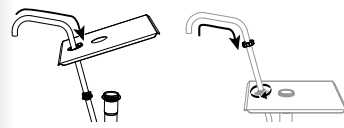

11 Install plunger assembly into cylinder. Rotate locking collar clockwise onto cylinder threads to secure.

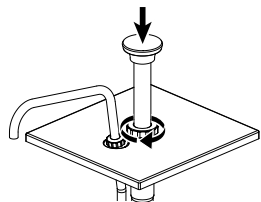

WANT TO LEARN MORE?

Visit server-products.com/manual-more for your manual, part breakdown, support videos and more.
spsales@server-products.com | 800.558.8722



MODEL
XXXX
P/N
#####

NSF®

SERIES
##X ##X

2 YEAR
WARRANTY

REFERENCE YOUR PART NUMBER
(P/N) LOCATED ON THE LID OR BASE.