

QUICK START GUIDE

Server Eco Pump™

Tips and tricks to help you get started with your new Eco Pump™.


1 Remove pump from box and disassemble then wash, rinse, and sanitize all parts properly before use.




2 Install O-ring into seal. Apply food equipment lubricant on O-ring.



3 Install seal onto head assembly piston. Apply small amount of food equipment lubricant inside seal. Flared end of seal should face away from piston head. Install pinch valve securely to seal end. Squeeze pinch valve open before installation.

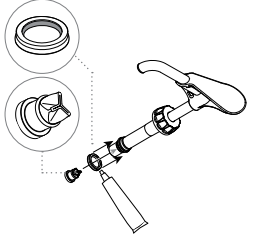


4 Install gaging collar(s) onto side of head assembly piston to reduce portion size.

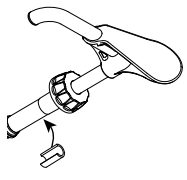


5 Insert spring into cylinder.



6 Snap cap onto cylinder. Press firmly to secure cap down over all threading on cylinder.

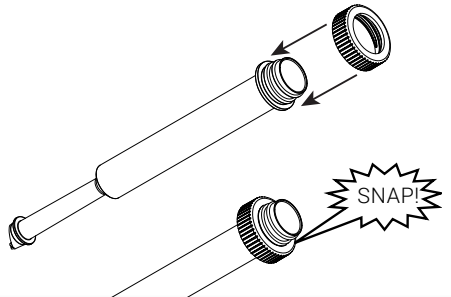


7 Install head assembly into cylinder. Apply small amount of food equipment lubricant inside top of cylinder and outside of seal. Slide locking collar down onto cylinder threading. Tighten firmly.

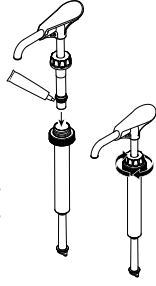

WANT TO LEARN MORE?

Visit server-products.com/manual-more for your manual, part breakdown, support videos and more.
spsales@server-products.com | 800.558.8722

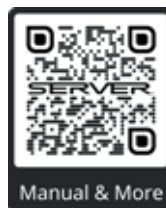

MODEL
XXXX
P/N
#####

NSF®

SERIES
##X ##X

2 YEAR
WARRANTY

REFERENCE YOUR PART NUMBER (P/N) LOCATED ON THE LID OR BASE.