


QUICK START GUIDE


Server Eco Pump™

Tips and tricks to help you get started with your new Eco Pump™.


**1** Disassemble and wash, rinse, and sanitize all parts properly before use.




**2** Install O-ring into seal. Apply food equipment lubricant on O-ring.

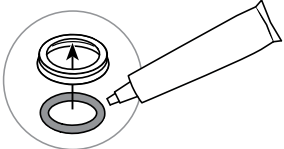


**3** Install seal onto head assembly piston. Apply small amount of food equipment lubricant inside seal. Flared end of seal should face away from piston head. Install pinch valve securely to seal end. Squeeze pinch valve open before installation.

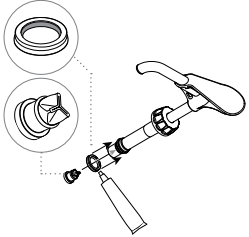


**4** Install optional gaging collar(s) onto side of head assembly piston to reduce the portion size.

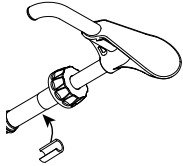


**5** Insert spring into cylinder.

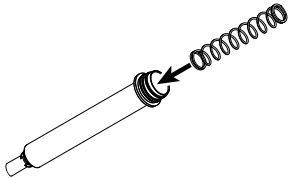


**6** Add lid onto cylinder.

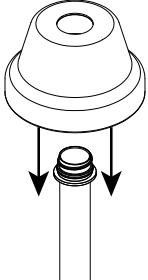

**7** Install head assembly into cylinder. Apply small amount of food equipment lubricant inside top of cylinder and outside of seal. Slide locking collar down onto cylinder threading. Tighten firmly.

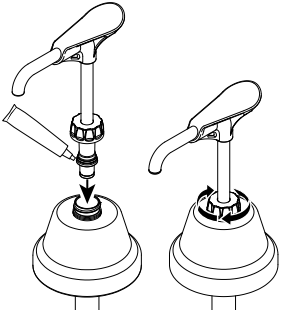


**8** Insert pump into product container. Prime pump by pressing several times until any air bubbles are eliminated and only product is dispensed.

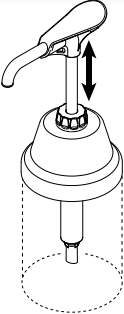

**WANT TO LEARN MORE?**

Visit [server-products.com/manual-more](http://server-products.com/manual-more) for your manual, part breakdown, support videos and more.  
[spsales@server-products.com](mailto:spsales@server-products.com) | 800.558.8722

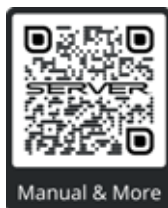

MODEL  
XXXX  
P/N  
#####

NSF®

SERIES  
##X ##X

**2** YEAR  
WARRANTY

**REFERENCE YOUR PART NUMBER (P/N) LOCATED ON THE LID OR BASE.**