


QUICK START GUIDE

Server ConserveWell®

 
Tips and tricks to help you get started with your new ConserveWell®.

**1** Remove unit from box. Wash all parts properly before use.




Never immerse complete unit into water. Electrical shock could occur.

**2** Install the unit by selecting wall location or sturdy vertical surface for mounting. Determine proper mounting hardware you will need to supply. Locate mounting holes approximately 27 cm (10-5/8") apart. Key slot mounting make removal easy.

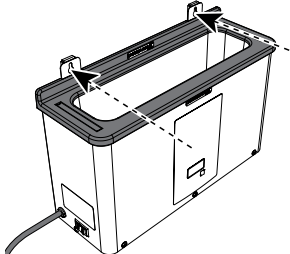


**3** Fill each pan with approximately 0.7 liter (3/4 quart) of HOT water. Insert both pans of water into basin. Pour water into pans only.




YES  
Proper water levels in PANS

NO  
Never pour water directly into BASIN

 **4** Plug cord into power source. Turn unit on.

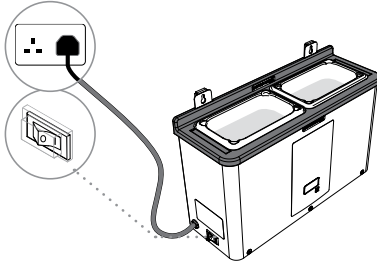


**5** Only use with utensils safe in high temperatures. Do not use liquid or gel-filled utensils. Handles become extremely hot.




**6** When water needs to be changed-out, remove and empty pans of water. Pans and water will be hot. Take proper care while removing pans. Carefully pour water down a drain.

 **CAUTION- HOT**  
Unit, pans and water will be hot.

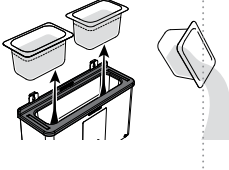

 **7** Refill and return water pans to basin. Fill each pan with approximately 0.7 liter (3/4 quart) of HOT water. Insert both pans of water into basin. Pour water into pans only.

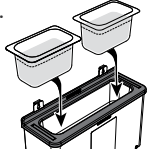

**8** Be aware of the water temperature. Help prevent bacteria growth. The FDA warns that bacteria grows most rapidly in the range of temperatures between 41°F - 135°F. (5°C - 57°C.)


WATER HEATING TIMES (When unit is not pre-heated)			
INITIAL WATER TEMP.	TARGET TEMPERATURE		
	57°C	60°C	62°C
21°C	50 min.	60 min.	77 min.
43°C	30 min.	38 min.	50 min.
49°C	21 min.	30 min.	41 min.
54°C	12 min.	20 min.	32 min.

WATER HEATING TIMES (In pre-heated unit)			
INITIAL WATER TEMP.	TARGET TEMPERATURE		
	57°C	60°C	62°C
21°C	49 min.	60 min.	86 min.
43°C	21 min.	29 min.	45 min.
49°C	15 min.	26 min.	45 min.
54°C	3 min.	12 min.	24 min.

**9** For units that have a countdown timer, press RESET to start the countdown cycle. Timer is factory preset for 4 hour cycles. When timer ends, an alarm will beep and the display will indicate "END". Press RESET to stop alarm, change out the water and press RESET to restart timer. See manual for instructions for reprogramming timer.

**WANT TO LEARN MORE?**

 Visit [server-products.com/manual-more](http://server-products.com/manual-more) for your manual, part breakdown, support videos and more.  
spsales@server-products.com | 800.558.8722

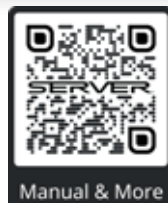

MODEL  
XXXX  
P/N  
#####

NSF

SERIES  
##X ##X

**2** YEAR  
WARRANTY

REFERENCE YOUR PART NUMBER (P/N) LOCATED ON THE LID OR BASE.