


QUICK START GUIDE

Server Touchless Express® Dispensers


Tips and tricks to help you get started with your new Touchless Express unit.

1 Remove unit from box and wash all parts properly before use.


Clean sensor window with a microfiber cloth. Keep window free of debris at all times.




2 Squeeze pinch valve open to ensure it isn't stuck shut, then insert into pump housing.

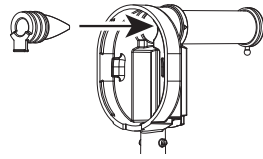

3 Press dome into housing fully and wrap loop around lower opening to secure.

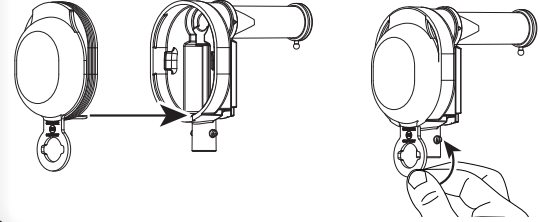


4 Install tube by rotating until both pegs on housing fit into holes on tube.

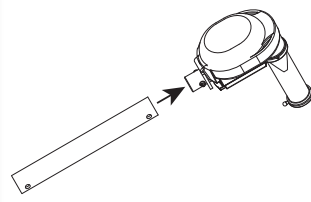


5 Install connector by rotating until both pegs on connector fit into holes on tube.

CONNECTOR MUST POINT AWAY FROM END OF DISCHARGE TUBE.

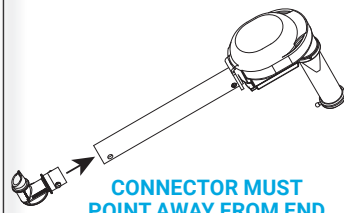


6 Select discharge fitting based on product consistency and insert into discharge tube. Place loop of fitting around peg on end of discharge tube.

SMALL MEDIUM LARGE

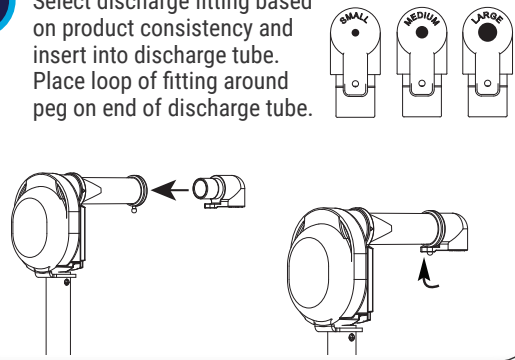


7 Firmly press piercing connector into center of pouch fitting.

AN AUDIBLE CLICK INDICATES A SECURE CONNECTION.

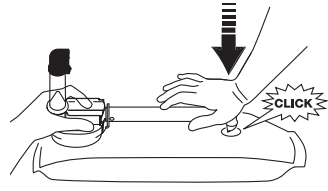


8 Slide pouch and pump into shroud.

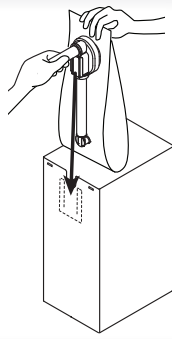


9 Put lid on shroud by matching lid slots with shroud tabs. Pull out locking pin to slide into position; release to lock.

SHROUD TABS

LOCKING PIN

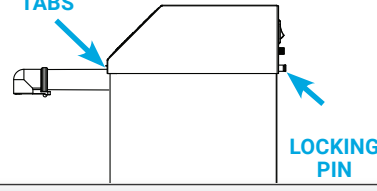


10 Plug cord into power outlet and press switch on.

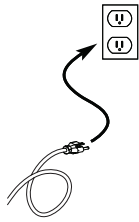

11 When starting the unit, it will cycle through three light colors (red, blue & green). Blue light indicates unit is at rest and ready to go.


CONSULT YOUR MANUAL FOR TROUBLESHOOTING INFORMATION.

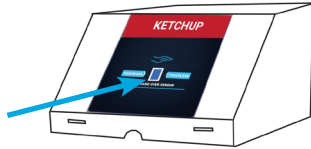

12 To prime pump or dispense manually, press area below sensor window. For touchless operation, hold hand over sensor window.


SENSOR

MANUAL BUTTON

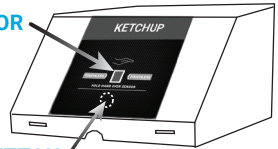

WANT TO LEARN MORE?

Visit server-products.com/manual-more for your manual, part breakdown, support videos and more.
spsales@server-products.com | 800.558.8722

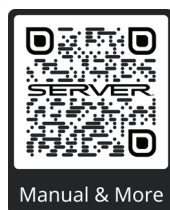

MODEL
XXXX
P/N
#####

NSF®

SERIES
##X ##X

1 YEAR
WARRANTY

REFERENCE YOUR PART NUMBER (P/N) LOCATED ON THE LID OR BASE.