




S E R V E R

SERVE BETTER™

BP TOOL 88129 FOR REMOVING SEAL

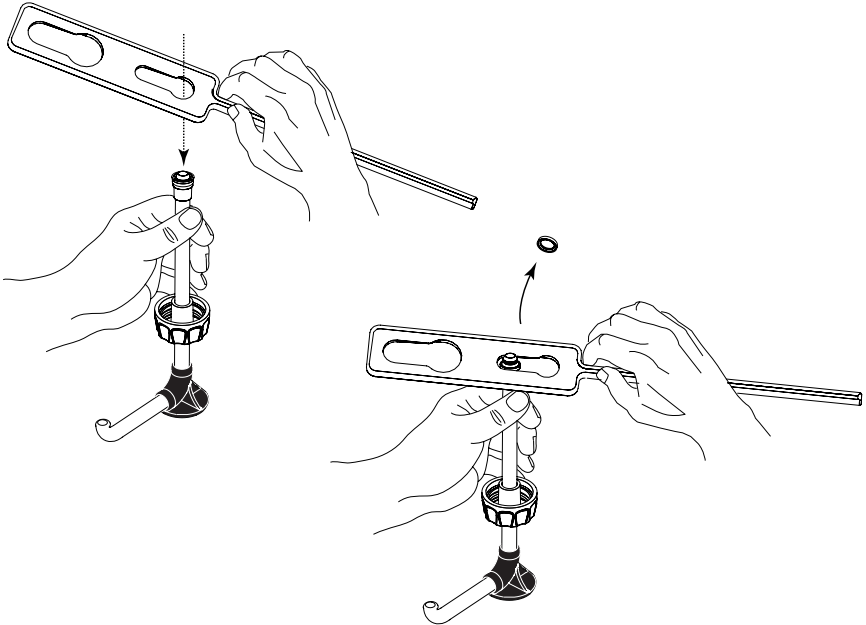

HOW TO USE SEAL REMOVAL TOOL:

1 INSERT PISTON AND SEAL INTO OPENING OF TOOL.

- Use larger opening in tool for BP-1
- Use smaller opening in tool for BP-½


2 ALIGN TOOL BETWEEN PISTON AND SEAL,
PULL TO REMOVE SEAL.


- Place your hand over tool and seal
to avoid losing seal.




Server Products Inc.


3601 Pleasant Hill Road
Richfield, WI 53076 USA

 262.628.5600

 800.558.8722

 262.628.5110

 spsales@server-products.com

 www.server-products.com