


QUICK START GUIDE

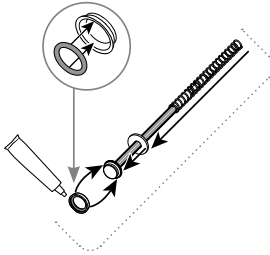
Server Stainless Steel Pump

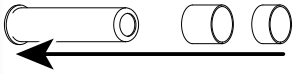
Tips and tricks to help you get started with your new Stainless Steel Pump.

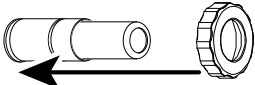
- 1** Remove pump from box. Disassemble and wash, rinse, sanitize, and air dry all parts before use.

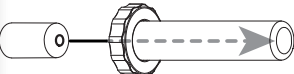
For clean-in-place procedure, scan QR code below and look up the part number of your pump for detailed instructions.



- 2** Install O-ring into seal. Install seal onto piston head. Apply food equipment lubricant on outside of seal. Slide washer into position. Slide spring into position.

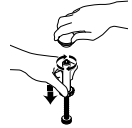

- 3** Add gaging collars if desired. Slide collar(s) onto head tube to reduce portion size.

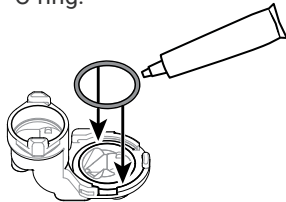

- 4** Slide locking collar (thread side down) towards flared end of head tube.

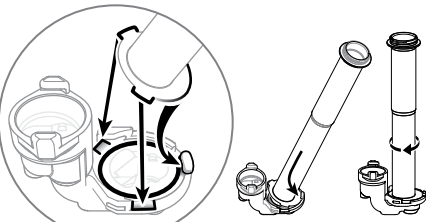

- 5** Slide head insert (beveled edge first) into head tube. The end with smaller hole should go first.

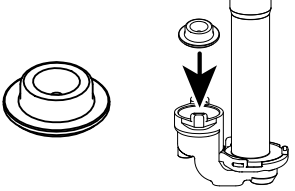

- 6** Insert piston assembly into head tube assembly.

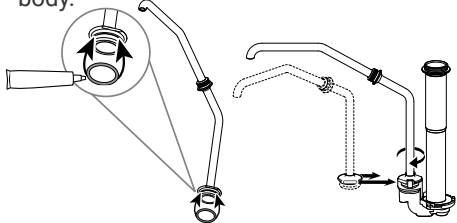

- 7** Install knob. Press head tube down to compress spring and expose piston threads. Rotate knob clockwise to secure.

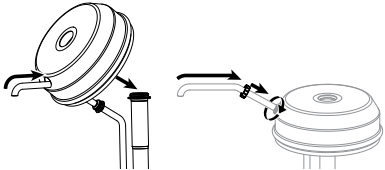

- 8** Install large O-ring into valve body. Apply food equipment lubricant on O-ring.

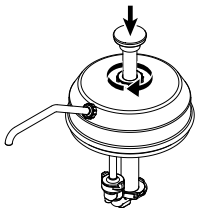

- 9** Install cylinder onto valve body.


- 10** Install orificed plug into valve body. The orificed plug controls the stream of thin liquids to deter splashing.


- 11** Install medium O-ring onto discharge tube. Apply food equipment lubricant on O-ring. Install discharge tube onto valve body.


- 12** Install lid by sliding smaller lid hole over discharge tube. Align center hole with threads on cylinder. Secure lid with discharge tube nut.


- 13** Install plunger assembly into cylinder. Secure with locking collar.



WANT TO LEARN MORE?

Visit server-products.com/manual-more for your manual, part breakdown, support videos and more.
spsales@server-products.com | 800.558.8722



MODEL
XXXX
P/N
#####

NSF

SERIES
##X ##X

2 YEAR
WARRANTY

REFERENCE YOUR PART NUMBER
(P/N) LOCATED ON THE LID OR BASE.