


## QUICK START GUIDE

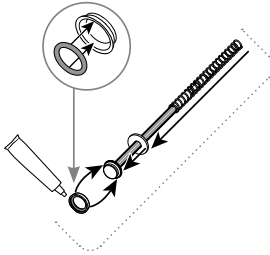
# Server Stainless Steel Pump

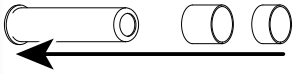
Tips and tricks to help you get started with your new Stainless Steel Pump.


- 1** Remove pump from box. Disassemble and wash, rinse, sanitize, and air dry all parts before use.


For clean-in-place procedure, scan QR code below and look up the part number of your pump for detailed instructions.



- 2** Install O-ring into seal. Install seal onto piston head. Apply food equipment lubricant on outside of seal. Slide washer into position. Slide spring into position.

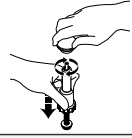

- 3** Add gaging collars if desired. Slide collar(s) onto head tube to reduce portion size.

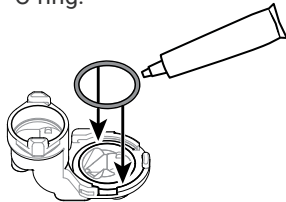

- 4** Slide locking collar (thread side down) towards flared end of head tube.

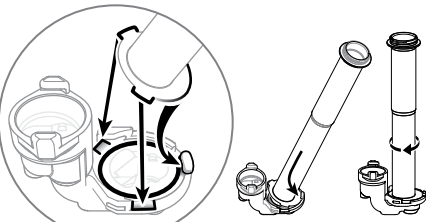

- 5** Slide head insert (beveled edge first) into head tube. The end with smaller hole should go first.

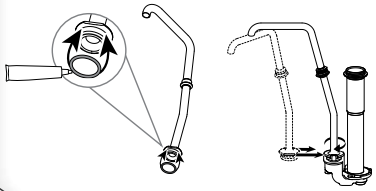

- 6** Insert piston assembly into head tube assembly.

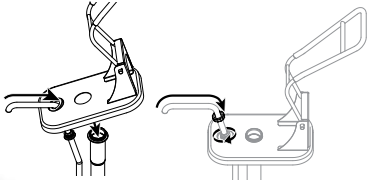

- 7** Install knob. Press head tube down to compress spring and expose piston threads. Rotate knob clockwise to secure.

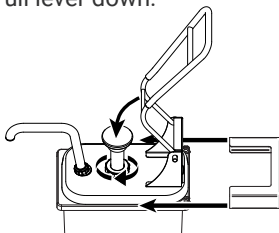

- 8** Install large O-ring into valve body. Apply food equipment lubricant on O-ring.


- 9** Install cylinder onto valve body.


- 10** Install medium O-ring onto discharge tube. Apply food equipment lubricant on O-ring. Install discharge tube onto valve body.


- 11** Install lid by sliding smaller lid hole over discharge tube. Align center hole with threads on cylinder. Secure lid with discharge tube nut.


- 12** Install plunger assembly into cylinder. Secure with locking collar. Insert into jar and secure with lid lock. Slide lid lock over back of pump and jar. Pull lever down.



## WANT TO LEARN MORE?

Visit [server-products.com/manual-more](https://server-products.com/manual-more) for your manual, part breakdown, support videos and more.  
[spsales@server-products.com](mailto:spsales@server-products.com) | 800.558.8722



MODEL  
XXXX  
P/N  
#####

NSF

SERIES  
##X ##X

**2** YEAR  
WARRANTY

REFERENCE YOUR PART NUMBER  
(P/N) LOCATED ON THE LID OR BASE.