SERVER ®
· E S S E N T I A L S ·
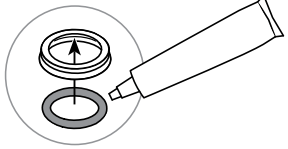
Server Eco Dispenser™

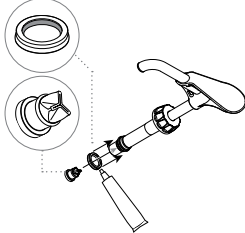## Tips and tricks to help you get started with your new Eco Dispenser™.

1 Remove lid, base, and pump from box and disassemble then wash, rinse, and sanitize all parts properly before use.
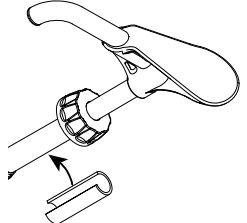
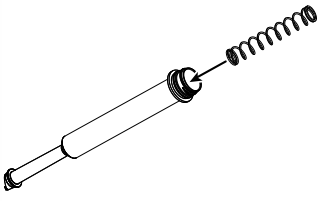**2** Install O-ring into seal. Apply food equipment lubricant on O-ring.

3 Install seal onto head assembly piston. Apply small amount of food equipment lubricant inside seal. Flared end of seal should face away from piston head. Install pinch valve securely to seal end. Squeeze pinch valve open before installation.
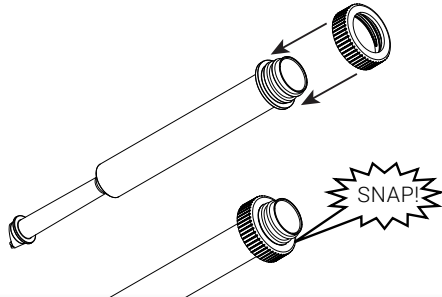
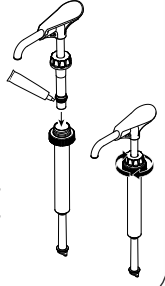**4** Install gaging collar onto side of head assembly piston.
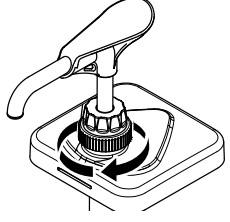
5 Insert spring into cylinder.

6 Snap cap onto cylinder. Press firmly to secure cap down over all threading on cylinder.
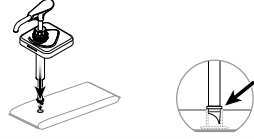
SNAP!

7 Install head assembly into cylinder. Apply small amount of food equipment lubricant inside top of cylinder and outside of seal. Slide locking collar down onto cylinder threading. Tighten firmly.
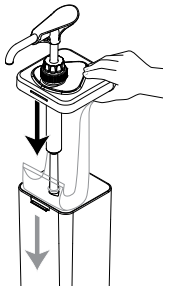
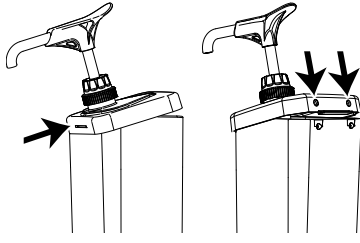**8** Secure pump into lid. Tighten cap firmly onto lid threading.

9 Attach pump to pouch by placing pouch on countertop with fitment facing up. Position pump connector directly over fitment and press down through film in fitment. Connector is fully engaged when top surface of fitment touches pump connector rim.
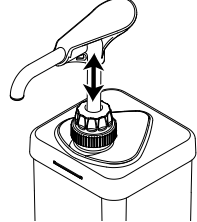
10 Insert pump, lid, and pouch combination into base.

11 Secure lid by inserting front slot of lid into tab on face of base. Push lid down to snap onto back pegs on shroud.
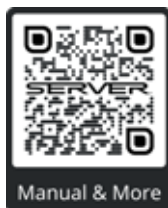
12 Prime pump by pressing several times until any air bubbles are eliminated and only product is dispensed.

WANT TO LEARN MORE?

Visit **server-products.com/manual-more** for your manual, part breakdown, support videos and more.

spsales@server-products.com | 800.558.8722

Manual & More

MODEL
XXXX
P/N
#####

NSF®

SERIES
##X ##X

2YEAR
WARRANTY

**REFERENCE YOUR PART NUMBER
(P/N) LOCATED ON THE LID OR BASE.**

SERVER ®
INTELLIGENT BY DESIGN®