


## Server EZ-Topper®


## Tips and tricks to help you get started with your new pouched topping warmer.








Never immerse complete unit into water. Electrical shock could occur.

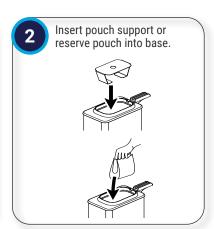


Make change-outs a cinch. Place a reserve pouch in the bottom of the base. When the primary pouch is emptied, the reserve pouch is pre-heated and ready for use.

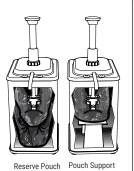



in base bottom



Attach pump to primary pouch. Place pouch on countertop with pouch fitment facing upward. Position pump connector directly over center of fitment. Press pump connector down to pierce through film in fitment. Top surface of fitment should touch connector rim.

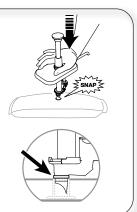

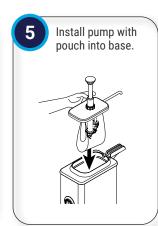

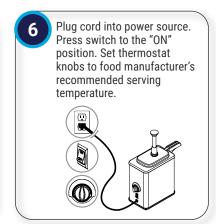



See separate pump manual cleaning instructions by scanning the QR code below and searching for the part number.



Allow unit to cool before cleaning.



Clean external surfaces daily with a clean damp cloth. Dry with clean soft cloth. Glass and surface cleaners approved for use in food contact

## areas may be used.

## **WANT TO LEARN MORE?**

Visit **server-products.com/manual-more** for your manual, part breakdown, support videos and more. spsales@server-products.com | 800.558.8722





**REFERENCE YOUR PART NUMBER** (P/N) LOCATED ON THE LID OR BASE.

