


# EZ-Topper® Tall, Twin

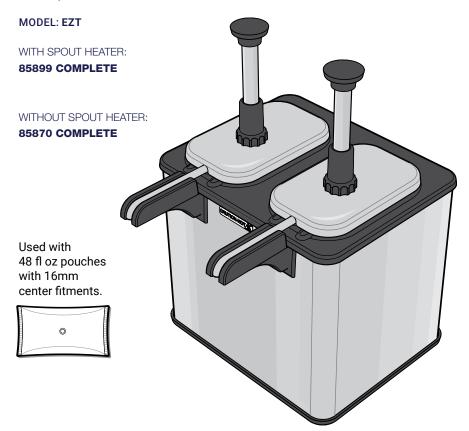


### Thank You

for your purchase. This pouched topping warmer virtually eliminates product degradation and waste, so you can reduce food costs while delivering a superior product.

SIMPLIFY TOPPING MANAGEMENT—GO POUCHED

# PARTS

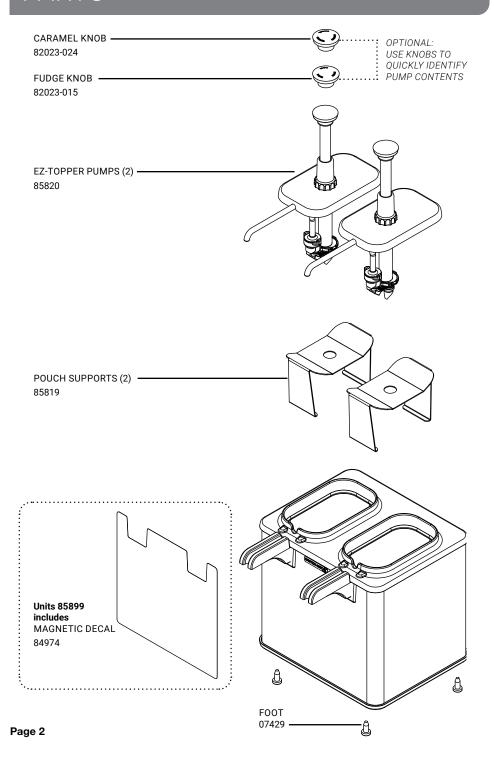

# SAFETY





#### **WARNING-**

#### **ELECTRICAL SHOCK COULD OCCUR**

This unit must be earthed or grounded.

This requires all three prongs (terminals) on cord plug to be plugged into power source.





According to food and safety regulations, most foods must be stored and/or served at certain temperatures or they could become hazardous. Check with local food and safety regulators for specific quidelines.

Be aware of the product you are serving and the temperature the product is required to maintain. Server Products, Inc. can not be responsible for the serving of potentially hazardous product.


# PRE-HEATING PRODUCT POUCHES

- Install pump with pouch. (See UNIT SETUP, pg. 4.)
- Adjust thermostat to food manufacturer's recommended serving temperature.

# Make change-outs a cinch.

Place a reserve pouch in the bottom of the base.

When the primary pouch is emptied, the reserve pouch is pre-heated and ready for use.

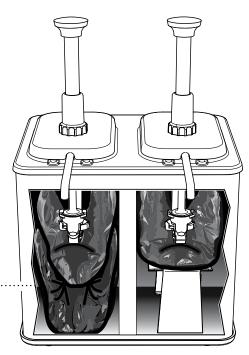

### Cutaway view shows:


Reserve Pouch in base bottom Pouch Support in base bottom

# **UNIT SETUP**

#### SEE SEPARATE PUMP MANUAL FOR PUMP SETUP.

1 INSERT INTO BASE: POUCH SUPPORTS OR RESERVE POUCHES

IMPORTANT: A pouch support or reserve pouch gives the primary pouch the proper elevation to dispense all product and heat evenly.






2 ATTACH EACH PUMP — TO EACH PRIMARY POUCH


- Place pouch on countertop with pouch fitment circle facing upward.
- Position pump connector directly over center of pouch fitment.
- Press pump connector down to pierce through film in pouch fitment.




Pump is fully engaged when top surface of pouch fitment touches pump connector rim.



3 INSTALL PUMPS WITH POUCHES INTO BASE



- 4 PLUG CORD into power source.
- **5** PRESS SWITCH to the "ON" position.
- 6 SET THERMOSTAT KNOBS to food manufacturer's recommended serving temperature(s).
  - Dial indicators use increments of 5° F.
  - Thermostat maximum is 210° F/99° C.

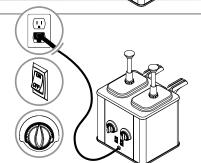


# **UNIT TAKE-DOWN**

- PRESS SWITCH to the "OFF" position.
- 2 UNPLUG CORD




#### **CAUTION- HOT**


Allow unit to cool before continuing or use proper care with hot surfaces.

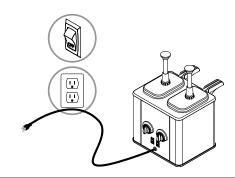

- REMOVE PUMPS WITH POUCHES
- REMOVE POUCH SUPPORTS OR RESERVE POUCHES

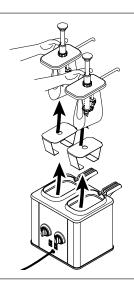

- 5 DETACH POUCHES from bottom of pumps.
- 6 FLUSH AND RINSE PUMPS
  Thoroughly rinse all inside and outside surfaces of pumps with hot water.



7 DISASSEMBLE AND CLEAN PUMPS.
SEE SEPARATE PUMP MANUAL FOR PUMP CLEANING.

# **CLEANING**







#### WARNING-ELECTRICAL SHOCK COULD OCCUR

- Electrical components of unit could be damaged from water exposure or any liquid.
- · Never immerse unit into water or any liquid.
- Never use any water jet or pressure sprayer on unit.
- · Ensure unit is "OFF" and unplugged.

#### **CAUTION- HOT**

Allow unit to cool before cleaning.





#### CLEAN EXTERNAL SURFACES

- · Wipe daily with a clean damp cloth.
- · Dry with a clean soft cloth.
- Glass and surface cleaners approved for use in food contact areas may be used.

# CARE OF STAINLESS STEEL


This warmer and accessories are constructed of stainless steel— one of the best materials for food serving and storage.

If you notice corrosion beginning on any stainless steel surface, you may need to change the cleansing agent, sanitizing agent, or the cleaning procedures you are using.

- A mildly abrasive nylon or brass brush may be used to remove any stubborn food or mineral deposits on interior surfaces of unit.
- Fully rinsing and drying all parts can help prevent corrosion. Elements and minerals in tap water can accumulate on stainless steel parts and create corrosion.
- Do not use abrasive, caustic or ammonia based cleansers.
- Do not use products containing acids, alkalines, chlorine, or salt. These agents can corrode stainless steel.
- Do not use metal scrapers or cleaning pads that could scratch surfaces.

# WIRING

### UNITS 85899, 85870 | 120V | USA

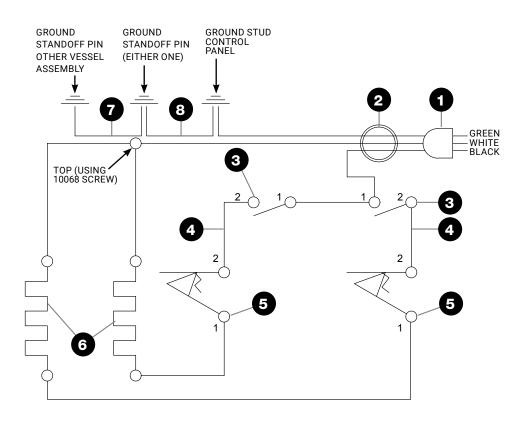

- Cord Assembly
- Bushing/Strain Relief
- Snap-In Rocker Switch
- 6" Wire Assembly, Black
- Thermostat
- Heating Element
- 6" Wire Assembly, Green
- 18" Wire Assembly, Green

# TROUBLESHOOTING

#### **UNIT DOES NOT HEAT?**

- · Ensure cord is securely plugged in.
- Ensure unit is on.
- · Ensure thermostat knob is set correctly.
- · Ensure power is available from source.
- Do not allow any of the electrical components to get wet. Moisture may cause the unit to trip breaker or GCFI. If moisture is suspected, discontinue use. Allow unit to fully air dry.

# POUCH DOES NOT EVACUATE ALL PRODUCT?

- Ensure that the pouch is properly connected with pump.
- Ensure that the pouch being dispensed is raised to proper height. Always use either a pouch support or a reserve pouch beneath primary pouch.

### SERVER PRODUCTS LIMITED WARRANTY

2 YEAR WARRANTY

This Server product is backed by a two-year limited warranty against defects in materials and workmanship. See <u>Server-Products.com</u> for details.

### GENERAL SERVICE, REPAIR OR RETURNS

Before sending any item to Server Products for service, repair, or return, contact Server Products customer service to request a **Return Authorization Number**. Merchandise must be sent to Server Products with this number. Service is extremely prompt. Typically, units are repaired and ship out within 48 hours of receipt.

Merchandise being returned for credit must be in new and unused condition and not more than 90 days old and will be subject to a 20% restocking charge. Electrical parts (thermostats, heating elements, etc.) are not returnable.

Servicing Cord: Specific tools are required for safe and proper power supply cord removal and installation. If cord must be replaced, only a representative of the OEM (original equipment manufacturer) or a qualified technician may replace cord. Cord must meet code designation H05 RN-F requirements.

### **NEED HELP?**

#### Server Products Inc.

3601 Pleasant Hill Road Richfield, WI 53076 USA

**Chat with us!** 

spsales@server-products.com

262.628.5600 | 800.558.8722

Please be prepared with your  ${\bf Model}, {\bf P/N}$  and  ${\bf Series}$  located on the lid or base of the unit.

Example:



SERIES ##X ##X

